


NO. 0829 Pile fleece jacket I women



Description (measured in cm)	S	M	L	XL	2XL	3XL
A: ½ Chest width	48	51	55	59	62	65
E: Front length from high point shoulder	66	68	70	72	74	76
H: Shoulder to shoulder	40	41.5	43.5	45.5	47	48.5
K: Sleeve length - long	65	66	67.25	68.5	69.5	71
L: ½ upper arm width	19	19.75	20.5	21.5	22.5	23.5

How to measure

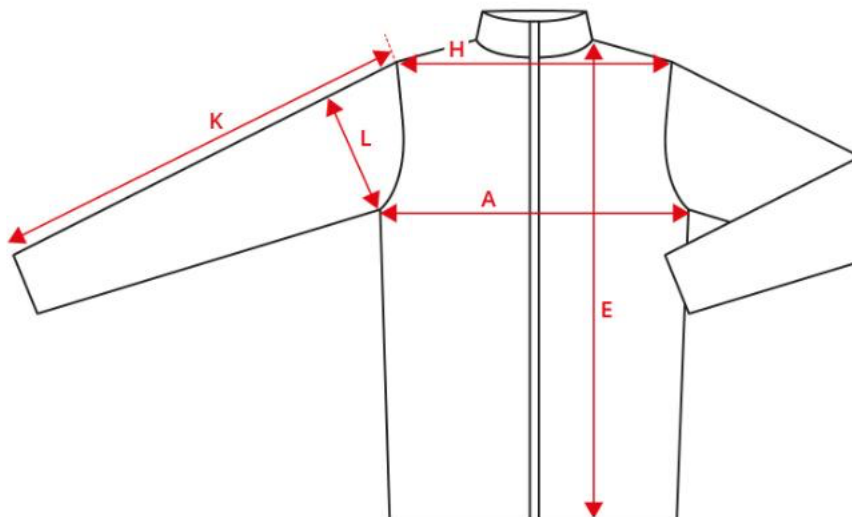

Tolerance +/- in cm

A	E	H	K	L
1.5	1.5	1.5	1.5	1

The measurements in a product measurement chart refer to measurements made directly on the clothing. Lay the garment out flat on an even surface without stretching it. Take the measurements as shown by the arrows and select the size that fits. Use a tape measure for the best results. The tolerances in the measurement chart are based on when the item is received from ID® and not