


NO. 0824 Soft shell vest | functional



Description (measured in cm)	S	M	L	XL	2XL	3XL	4XL	5XL	6XL
A: ½ Chest width	51	54	57	60	63	66	70	74	78
E: Front length from high point shoulder	68	70	72	74	76	78	80	82	84
H: Shoulder to shoulder	45	46.5	48	49.5	51	52.5	54.5	56.5	58.5

How to measure

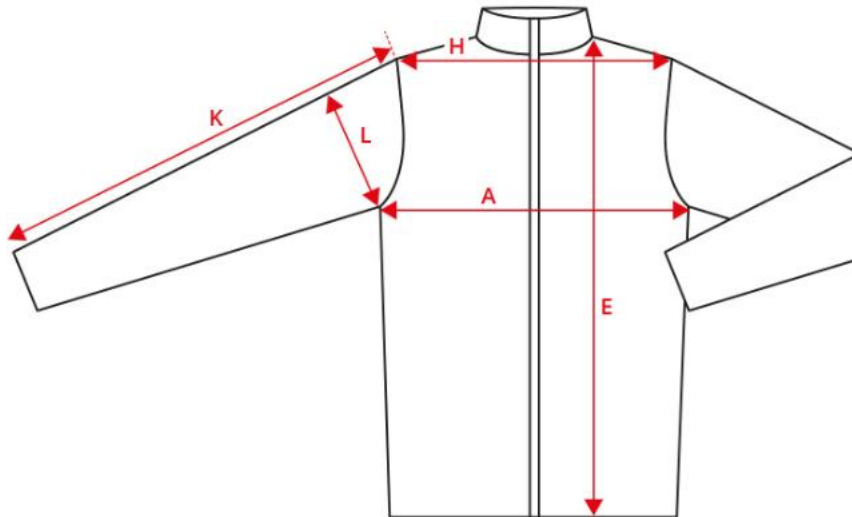

Tolerance +/- in cm

A	E	H	K	L
1.5	1.5	1.5	1.5	1

The measurements in a product measurement chart refer to measurements made directly on the clothing. Lay the garment out flat on an even surface without stretching it. Take the measurements as shown by the arrows and select the size that fits. Use a tape measure for the best results. The tolerances in the measurement chart are based on when the item is received from ID® and not